


Juki Household Sewing Machine Accessories List

Description	Picture	Explanation	Model
Overcasting Foot		It prevents the edge of fabric from fraying	HZL-E80/E70/E61 Part No. A9821T700A0
			HZL-F600/F400/F300 Part No. 40080960
Blind Stitch Presser Foot		For blind hem stitching	HZL-E80/E70/E61 Part No. A98220100A0
			HZL-F600/F400/F300 Part No. 40080961
Zipper Foot		For attaching zippers	HZL-E80/E70/E61 Parts No. A98230080A0
			HZL-F600/F400/F300 Part No. A98230100A0
Buttonholing Presser Foot		For automatic buttonholes	HZL-E80/E70/E61 Part No. A9824E800A0
			HZL-F600/F400/F300 Part No. 40080966
Smooth Foot		For hard-to-feed fabrics (vinyl cloth, leather)	HZL-E80/E70/E61 Part No. A982501S0A0
			HZL-F600/F400/F300 Part No. 40079312
Rolled Hemming Foot		For hemming stitch with rolled fabric (7mm)	HZL-E80/E70/E61 Part No. A98260080A0
			HZL-F600/F400/F300 Part No. 40080958
Zig Zag Rolled Hemming Foot		For hemming zigzag stitch with rolled fabric	HZL-F600/F400/F300 Part No. 40080957
Invisible Zipper Foot		For installation of concealed zipper	HZL-E80/E70/E61 Part No. A98270080A0
			HZL-F600/F400/F300 Part No. 40080955
Manual BH Presser Foot (Pattern Attachment)		For buttonholes of all sizes including heavy-weight placket or collar band	HZL-E80/E70/E61/ F600/F400/F300 Part No. A98280080A0

Even Feed Foot		It prevents sewing slippage of fabric such as velvet and quilting	HZL-E80/E70/E61 Part No. A9811E600A0 HZL-F600/F400/F300 Part No. 40080963
Quilting Foot		For quilting or free-motion embroidery	HZL-E80/E70/E61 Part No. A9816E600A0 HZL-F600/F400/F300 Part No. 40080964
Quilting Presser Foot (open type)		For free motion sewing. (Front part is open for better visibility)	HZL-F600/F400/F300 Part No. 40080949
Quilting Presser Foot (transparent type)		For free motion sewing and zigzag free motion sewing	HZL-F600/F400/F300 Part No. 40080953
Open Toe Presser Foot		For applique and decorative stitch. (Front part is open for better visibility)	HZL-F600/F400/F300 Part No. 40080962
Edge Sewing Presser Foot		For patchwork sewing (Sewing center line of joined materials by using the center guide)	HZL-F600/F400/F300 Part No. 40080965
Applique Presser Foot		For applique stitch (Front and back parts are short for easy movement at curve points)	HZL-F600/F400/F300 Part No. 40080951
Pearl Attaching Presser Foot		For attaching pearls, beads and thick cord	HZL-F600/F400/F300 Part No. 40080956
Binder Presser Foot		For attaching bias tape into for folds	HZL-F600/F400/F300 Part No. 40080954
Cording and Embroidery Presser Foot		For free motion quilting together with cord sewing	HZL-F600/F400/F300 Part No. 40080950

Cording Presser Foot		For attaching three or less cords as decorative stitch	HZL-E80/E70/E61 Part No. A98298800A0
Straight Stitch Presser Foot		For straight stitch sewing	HZL-E80/E70/E61 Part No. A98306760A0
Piecing foot		To give an indication of 1/4" and 1/8" seam allowance	HZL-E80/E70/E61 Part No. A98310080A0
1/4" Foot Presser		To guide a 1/4" seam allowance	HZL-E80/E70/E61 Part No. A983250C0A0
Patchwork presser foot		For patchwork stitches with 1/4 inch and 1/8 inch guide	HZL-F600/F400/F300 Part No. 40080959
Presser Foot with Guide		Presser foot with 2 mm distance guide	HZL-F600/F400/F300 Part No. 40080952
Button Attaching Presser Foot		For attaching buttons on garments	HZL-F600/F400/F300 Part No. 40080969
Auxiliary Spool Pin		For twin needle sewing or for bobbin thread winding	HZL-F600/F400/F300 Part No. 40080967
Throat plate for straight stitch		The small hole of throat plate prevents material puckering	HZL-F600/F400/F300 Part No. 40080968
Ruler		To help in sewing equally spaced lines	HZL-E80/E70/E61/F600/F400/F300 Part No. A98335500A0

Wide Table



Easy to handle large work pieces or fabric rolls for sewing and quilting

HZL-E80/E70/E61

HZL-F600/F400/F300